

**FIORINO 2008>**

**BIPPER 2008>**


**NEMO 2008>**



SW13 (20Nm)




SW17 (40Nm)

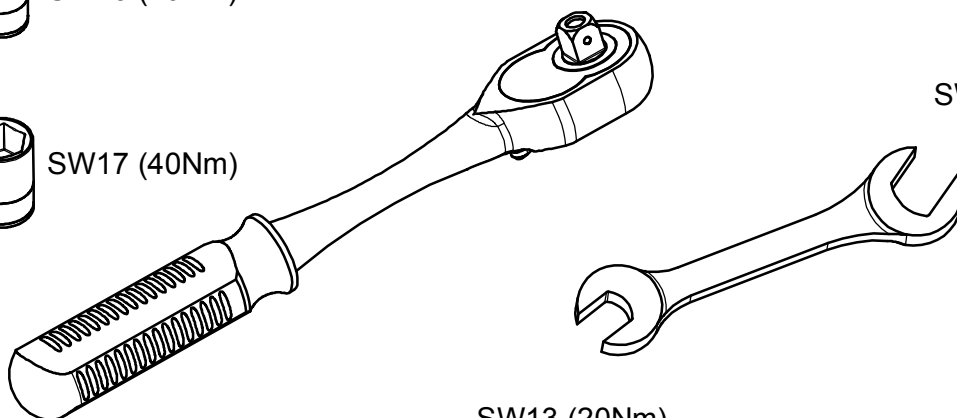



SW17 (40Nm)

SW13 (20Nm)


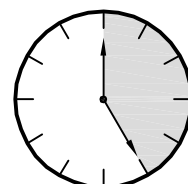


25 DAKİKA

# MONTAJ SETİ / INSTALLATION SET

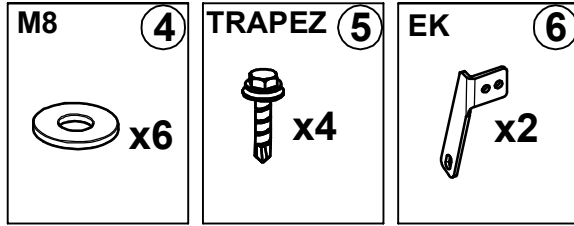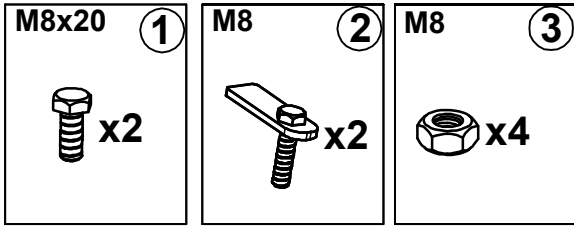

1. M8x20 ANAHTAR BAŞLI CİVATA / M8x20 KEY HEAD BOLT
2. M8 LAMALI CİVATA / M8 MOUNTING PLATE
3. M8 SOMUN / M8 NUT
4. M8 PUL / M8 WASHER
5. TRAPEZ / TRAPEZE
6. EK PARÇA / ADDITIONAL

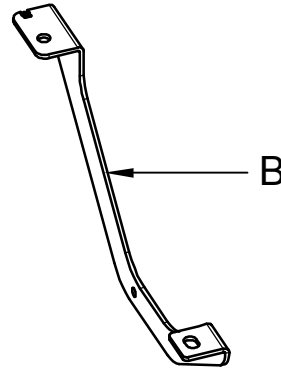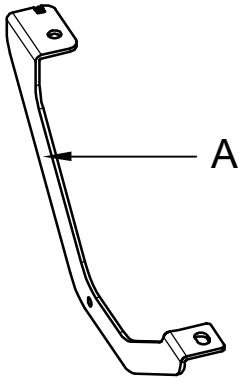

## BRACKETLER / BRACKETS

A. 2521MDA L R / SOL ARKA BRAKET / LEFT REAR BRACKET

B. 2521MDA R R / SAĞ ARKA BRAKET / RIGHT REAR BRACKET



Fig. 1



LR

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT ALREADY  
ATTACHED ON THE VEHICLE



Fig. 5



RR

ARAÇ ÜZERİNDEKİ PLASTİK KAPAĞI SÖKÜNÜZ  
PLEASE REMOVE THE STOPPER THAT ALREADY  
ATTACHED ON THE VEHICLE



Fig. 2

2



LR

2 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 2)  
TO THE PLACE SHOWN ABOVE



Fig.

2



RR

2 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 2)  
TO THE PLACE SHOWN ABOVE



Fig. 3

6



LR

6 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 6)  
TO THE PLACE SHOWN ABOVE



Fig. 7

6



RR

6 NUMARALI PARÇAYI YERİNE TAKINIZ  
PLEASE ATTACH THE PART (PART NO 6)  
TO THE PLACE SHOWN ABOVE



Fig. 4



LR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



Fig. 8



RR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ  
INSTALL THE BRACKET WITH BOLTS



## MONTAJ ŞEMASI / INSTALLATION SCHEME

