


SPRINTER 2006-2017



CRAFTER 2006-2017

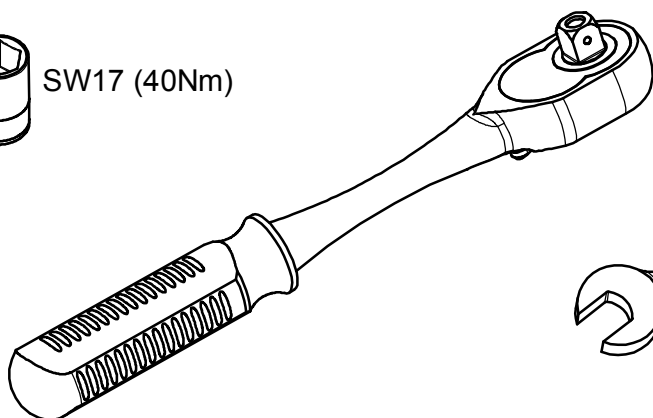


SW17 (40Nm)




SW17 (40Nm)

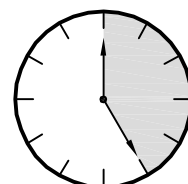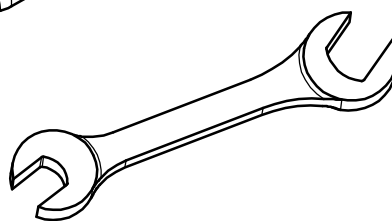

MONTAJ SETİ / *INSTALLATION SET*

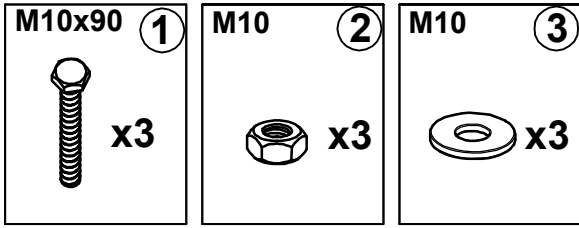

1. M10x90 CİVATA / *M10x90 BOLT*
2. M10 SOMUN / *M10 NUT*
3. M10 PUL / *M10 WASHER*

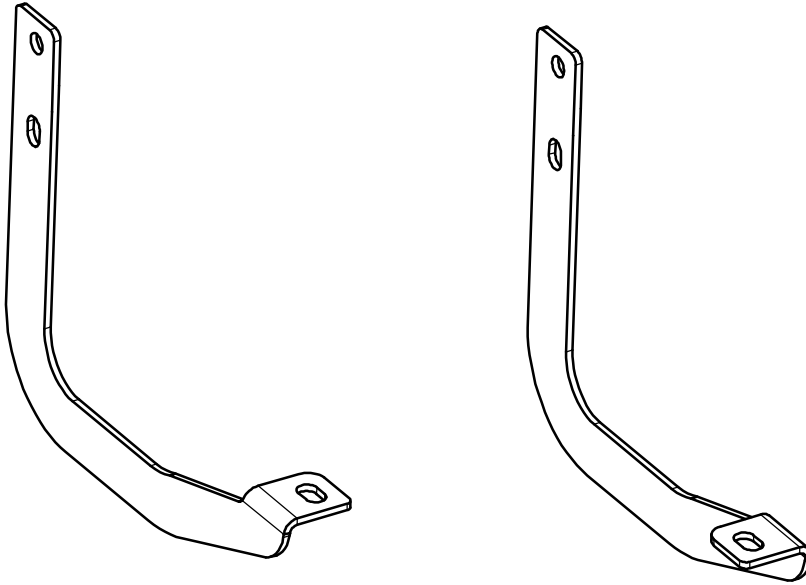

BRAKETLER / BRACKETS

A.4724MDA L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*

B. 4724MDA R R / SAĞ ARKA BRAKET / *RIGHT REAR BRACKET*

Fig. 1



1 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE

Fig. 4



1 NUMARALI PARÇAYI YERİNE TAKINIZ

PLEASE ATTACH THE PART (PART NO 1)
TO THE PLACE SHOWN ABOVE

Fig. 2



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 5



BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 3



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

Fig. 6



ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT



MONTAJ ŞEMASI / INSTALLATION SCHEME

