





VW T-5 2003> VW CARAVELLE 2003>



SW13 (40Nm)

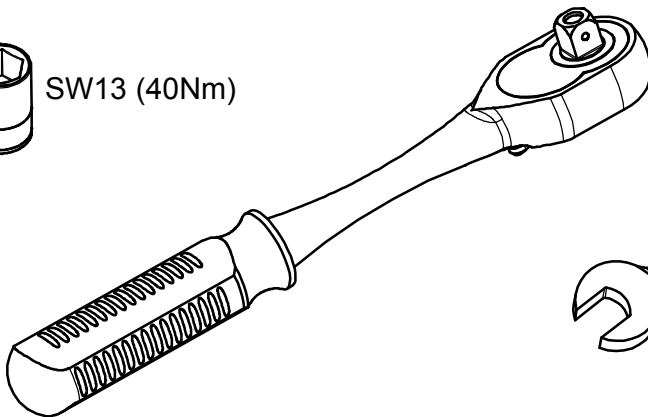



SW19 (55Nm)

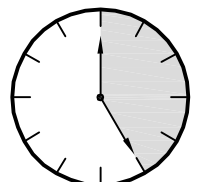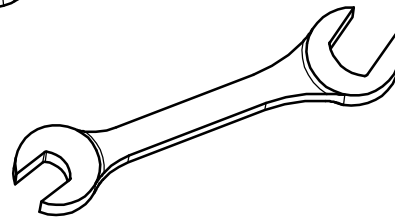

MONTAJ SETİ / *INSTALLATION SET*

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLANIR

INSTALL WITH THE BOLTS ON YOUR VEHICLE

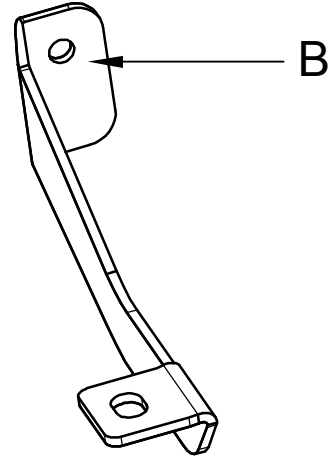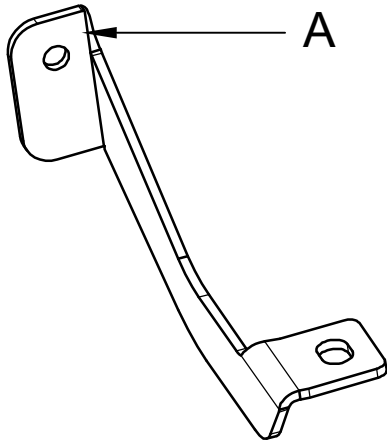

BRACKETLER / BRACKETS

A. 7522MDA L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*

B. 7522MDA R R / SAĞ ARKA BRAKET / *RIGHT REAR BRACKET*



Fig. 1

▲
LR
LEFT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 4

▲
RR
RIGHT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 2

▲
LR
LEFT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 5

▲
RR
RIGHT
REAR

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE



Fig. 3

▲
LR
LEFT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



Fig. 6

▲
RR
RIGHT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



▲
LR
LEFT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



▲
RR
RIGHT
REAR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS



MONTAJ ŐEMASI / INSTALLATION SCHEME

