





VOLKSWAGEN CADDY 2021>



SW13 (20Nm)

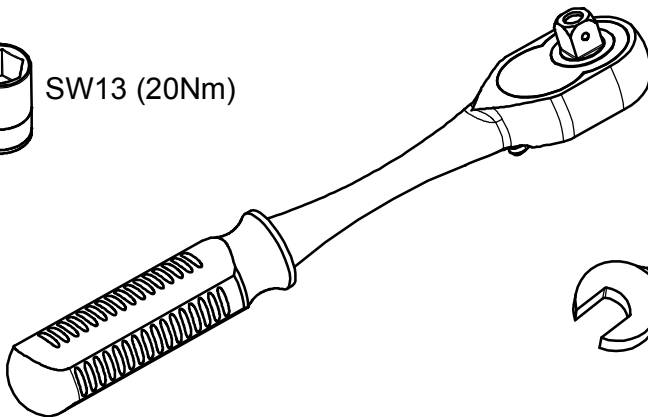


SW13 (20Nm)

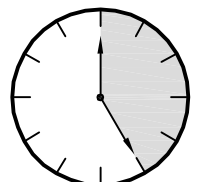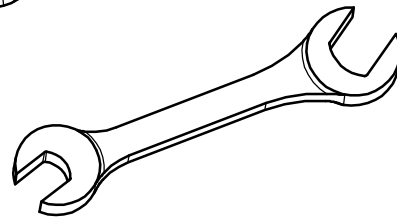

MONTAJ SETİ / *INSTALLATION SET*

ARAÇ ÜZERİNDEKİ CİVATALAR İLE MONTAJLANIR

INSTALL WITH THE BOLTS ON YOUR VEHICLE

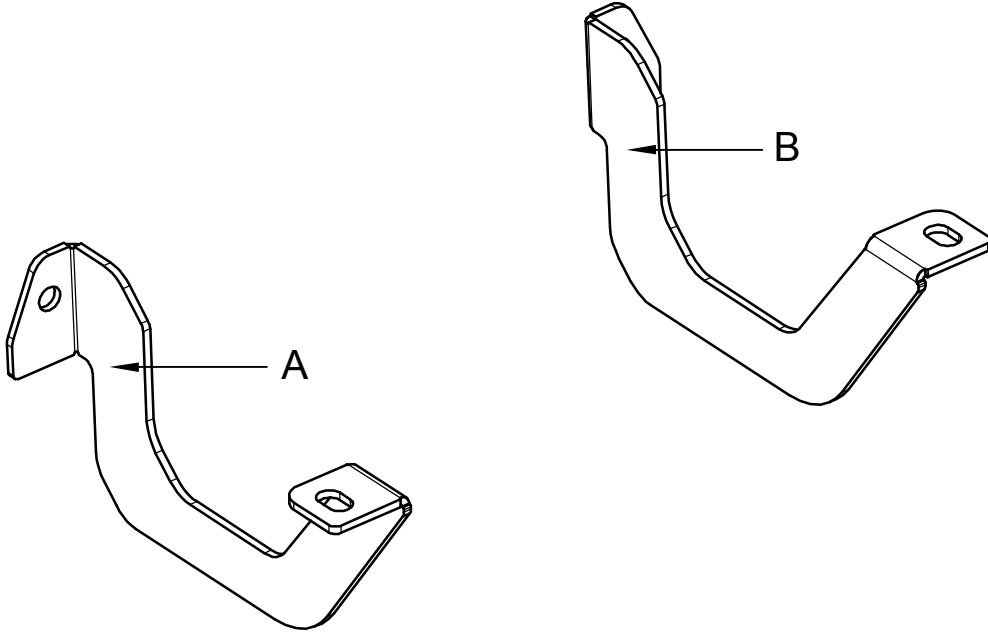

BRACKETLER / BRACKETS

A. 7566MDA L R / SOL ARKA BRAKET / *LEFT REAR BRACKET*

B. 7566MDA R R / SAĞ ARKA BRAKET / *RIGHT REAR BRACKET*

Fig. 1



LR

ARAÇ ÜZERİNDEKİ CİVATALARI SÖKÜNÜZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE


Fig. 4



RR

ARAÇ ÜZERİNDEKİ CİVATALARI SÖKÜNÜZ
INSTALL WITH THE BOLTS ON YOUR VEHICLE

Fig. 2

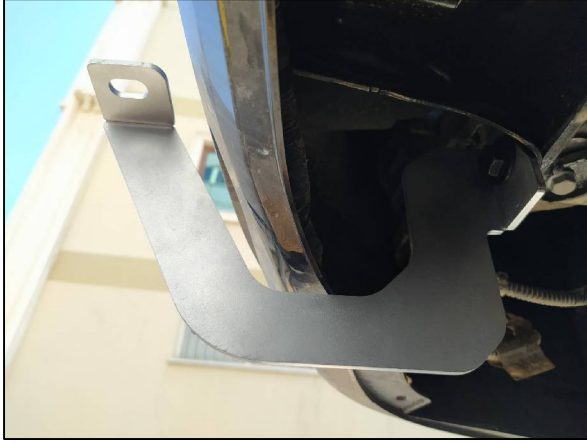

LR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 5



RR

BRAKETİ CİVATALAR İLE MONTAJLAYINIZ
INSTALL THE BRACKET WITH BOLTS

Fig. 3



LR

ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT

Fig. 6



RR

ÜRÜNÜ MONTAJLAYINIZ
PLEASE INSTALL THE PRODUCT



MONTAJ ŐEMASI / INSTALLATION SCHEME

